


**Converter / Charger  
Main Board Assembly**




**REPLACEMENT  
CONVERTER/CHARGER  
FOR WFCO  
POWER DISTRIBUTION PANEL**

**PMPC-xx-MBA  
45, 55, and 75 Amp models**

**Installation & Maintenance**

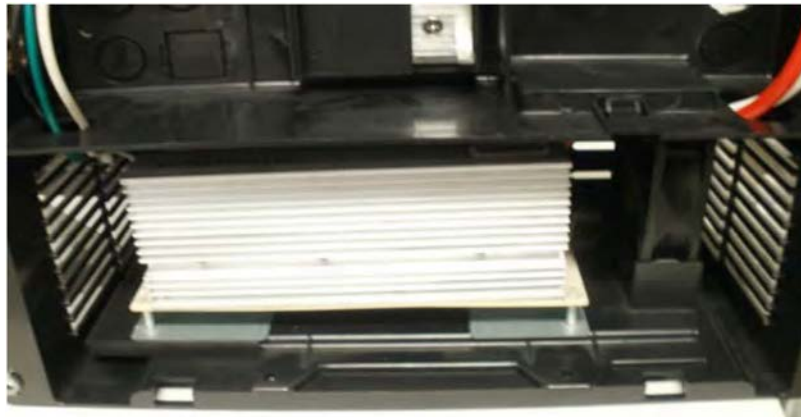

**Figure 1 WFCO converter/charger**

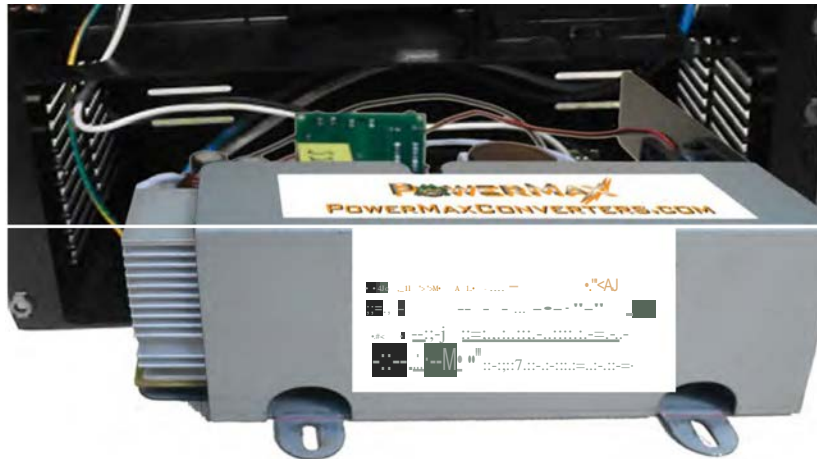

**Figure 2 Powermax converter/charger**

WFCO Wire Colors	Powermax Wire Colors	Remarks
Green	Green/Yellow	Chassis Ground
Black	Black	A.c. Line (Hot)
White (smaller)	White (smaller)	A.c. Neutral (Return)
Red	Blue	D.c. Positive
White (Heavy)	White (Heavy)	D.c. Negative



 **SAFETY ALERT!**

FOR YOUR SAFETY, READ ALL INSTRUCTIONS BEFORE INSTALLATION AND OPERATION.

**INSTALLER:** Provide these instructions to the end user or consumer.

**CONSUMER:** Keep these instructions for future reference.

NOTICE: Products are not to be used nor are warranted in aerospace, medical or life safety applications.

 **WARNING - Avoid Possible Injury or Death**

**120 VAC** is present. This Converter/Charger is designed to convert **120 VAC** to **12 VDC**. It also provides low voltage power for charging on-board **12 VDC** batteries. The SRV series Converter/Charger is a "switch mode" type and is designed to be maintenance-free with no user serviceable components. The Converter/Charger power output is "current limiting" by design.

The Converter/Charger is integrated with a **120 VAC** and **12 VDC** Distribution Panel that allows easy installation and centralizes all power connections. Stab type AC breakers with branch circuits are used. The DC fuse block has individually fused branch circuits. The Converter/Charger can easily be removed without removing the Distribution Panel wiring.

 **WARNING - Avoid Personal Injury or Product Damage!**

NEVER store electrical devices in compartments where flammable liquids (such as gasoline) exist.  
DO NOT mount/install unit in compartments designed for storage of batteries or flammable liquids.

1. **DISCONNECT RV DC POWER.** Disconnect the RV battery POS (+) wire at the battery end before connecting this Converter/Charger and Distribution Panel to any RV wiring.
2. **LOCATION.** The Main Board Assembly is mounted in the bottom compartment of the Power Distribution Panel cabinet.
3. **MOUNTING.** Flanges with holes are provided for ease of mounting using standard fasteners.
4. **ELECTRICAL REQUIREMENTS.** A **120 VAC** with 30 Amp source, preferably a separate breaker, is required to supply power.
5. **ELECTRICAL CONNECTIONS.** Be sure to tighten all connections securely. A loose connection can quickly cause terminals and wires to overheat. Review unit labels for recommended terminal torque values.
6. **THE FAN WILL NOT RUN ALL THE TIME. THE FAN RUNS ONLY WHEN NEEDED.**
7. **All PM3 Products must be installed by a certified electrician.**

 **WARNING - Avoid Possible Injury or Death!**

**120 VAC Connection** - First confirm that the **120 VAC** power source AC circuit breaker(s) are in the [OFF] position. **DO NOT** turn on AC circuit breakers until installation is complete. Connect the Neutral (white) wire to the Neutral terminal block (top left), the Line (black) wire to the appropriate circuit breaker and the Ground (green-yellow) wire to the chassis terminal block (side left).

**12 VDC Wiring**- It is important to use the correct wire gauge for the specific model **120 VAC** to **12 VDC** Converter/Charger selected. As an example, the model PM4B-55-MBA is a 55 Amp Converter/Charger that requires at least 10 AWG wire. Connect the positive (Blue) and negative (White) wires to the same terminals where the old unit positive (Red) and negative (White) wires were removed. The Converter/Charger limits overall current output. However, with or without output current limits on the Converter/Charger unit, all electrical connections must comply with the appropriate NEC codes.



**8. ADJUST FIXED VOLTAGE DESCRIPTION:**

The unit is on the three stage charging mode firstly. 1. move the switch A to right, move switch B gently to adjust voltage from 13~16. SV, and get a fixed output voltage. 2. make sure the voltage as 14.6V, move the switch A to left, then the unit back to standard "Three Stage Charging", run 14.6V almost 0.5 hour, 13.6V almost 12 hours and then to 13.2V. The voltage value of 3 stage charging will be changed with fixed voltage changed when the unit on "Three stage charging" mode.

9. **TEST.** First, disconnect all loads and battery on the Converter/Charger by removing all DC fuses. Second, attach a multimeter instrument between the positive and negative terminals of the Converter/Charger. Then energize the **120 VAC** converter circuit. Test for proper output power using the multimeter. Measure the output voltage from the positive and negative terminals. The voltage should read **13.6 +/- 0.2 VDC**. Add **12 VDC** load connections/fuses to about 1/2 of the rated capacity of the converter. Recheck the voltage, which should remain approximately the same as with no load.

10. **BATTERY.** With the **120 VAC** disconnected, reconnect the positive terminal to a known good battery. With the converter **120 VAC** energized, measure the voltage at the converter and at the battery. The voltage should be about the same in both locations. As with any battery it is important that the fluid level be checked on a regular basis. When continuously connected to any charging source all batteries will "Gas" and lose some fluid.



**WARNING - Avoid Personal Injury/ Product Damage!**

11. **HI-POT TESTING.** (RV Manufacturing Facilities Only) DO NOT Hi-Pot DC wiring with any Converter/Charger connected to the RV wiring in order to prevent serious injury and/or damage.

**TROUBLESHOOTING**

**NOTE:** Before removing and replacing the Converter/charger, perform the following checks:

- a. Disconnect the **120 VAC** power from the RV coach.
- b. Disconnect all DC fuses and the Battery from the Distribution Panel.
- c. Re-connect the **120 VAC** power to energize the Converter.
- d. Using a voltmeter, measure the voltage between the Converter terminal and the 12 VDC distribution Negative bar.
  - > The Converter is OK if the voltage reading is between 13 VOE and 14 VOE (typically 13.6 VDC).
  - > Otherwise, check the table below:

CONDITION	POSSIBLE CAUSE
No 12 VOE output	<b>120 VAC</b> not connected to coach or the coach AC circuit breaker is in the position. Reversed battery fuses blown. (Battery wiring connections are reversed), Severe overload or shorted load. Remove all loads and retest per above instructions. Converter internal failure.
Converter cycles On & Off	Fan air flow is inadequate or blocked. (Ensure 1" min. free air space at each end required.) Converter internal failure.
Reversed Battery fuses blown	Battery wiring connections are reversed. Defective battery, possible bad cells.
12 VDC output is too low	Attached load exceeds rating of the Converter. Defective battery, possible bad cells. Converter internal failure.



## **TWO YEAR LIMITED WARRANTY**

**Limited Warranty and Remedy:** Fieldstone Products I, LLC ("Supplier") warrants products it sells against faulty workmanship or the use of defective materials and that such products will conform to published specifications, drawings and other descriptions for a period of two years.

This warranty is the only warranty made by Supplier and is in lieu of all other warranties, express or implied, except as to title, and can be amended only by a written instrument signed by an officer of Supplier.

The liability of Supplier under this warranty is limited solely to replacing, repairing or, at Supplier's discretion, issuing credit for any devices which are returned by Buyer during the schedule period, provided that (a) Supplier is promptly notified in writing upon discovery of any defect by Buyer with a detailed explanation of any alleged deficiencies; (b) the defective product is returned to Supplier, transportation charges prepaid by Buyer; and (c) Supplier's examination of such product discloses to its satisfaction that such defect was not caused by misuse, neglect, improper installation, repair, alteration or accident. In no event shall Supplier be liable to Buyer for loss of profits, loss of use, or damages of any kind based upon a claim for breach of warranty.

## **GENERAL DISCLAIMER**

In accordance with our policy of continuous product improvement, Supplier reserves the right to make changes or improvements to the products and specifications at any time without prior notice. Prices are also subject to change without notice.

Supplier makes every effort to ensure information provided in our technical literature is accurate and reliable. We cannot, however, assume responsibility for inadvertent errors, inaccuracies, omissions or subsequent changes. We assume no responsibility for the use of this information, and any and all such use of this information shall be entirely at the user's own risk. No patent rights or licenses applicable to any of the products of Supplier's intellectual property described herein are granted to any third party, either directly or by implication, or any other means. Furthermore, despite efforts to ensure otherwise, we make no representation that the information and/or circuitry described herein is free of infringement on any intellectual property rights or any other rights of third parties.

## **LIMITATION ON THE USE OF PRODUCTS**

Products are not designed for and should not be used in any life-support systems, nuclear facility applications, aircraft control applications, or any other applications in which failure of the product, in any way, could reasonably result in harm to life, property or the environment, without the specific prior written consent of an officer of Supplier.

A life support system is defined as a product or system intended to support or sustain life and whose failure can be reasonably expected to result in significant personal injury or death. Nuclear facility applications are defined as any application involving a nuclear reactor or the handling and processing of radioactive materials in which the failure of equipment, in any way, could reasonably result in harm to life, property or the environment.

**Fieldstone Products PMB 103 • 11161 E SR 70 STE 110 • Lakewood Ranch, FL 34202**

**Phone: 941-201-8041 • Fax: 941-405-4930**

**[www.powermaxconverters.com](http://www.powermaxconverters.com)**