



## **“HITCH-N-GO CART” WHEEL KIT**

### **MODEL : HNGC-350 WHEEL KIT**

#### **⚠ WARNING**

**READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THE HITCH-N-GO WHEEL KIT!**  
**NOTE: Failure to read instructions AND WARNINGS before use could result in injury or death.**

### **Instructions for Installation and Use:**

#### **CONTENTS:**

- 4- Tires
- 2- 5/8” axles
- 1-Steering axle assembly with pull handle.
- 1-Rear Axle Assembly
- 4-Aluminum Wheel Spacers
- 4-5/8” Washers
- 4-Cotter Pins
- 9- 1/4”x 1/2” Bolts
- 9-1/4” Jam Locknuts
- 8-1/4” Fender Washers
- 1-Padded Conduit Clamp
- 1-Handle Holding Bracket
- 1-1/4” Wire Lock Pin with Lanyard



**NOTE: Review contents to ensure all parts are received.**

**STEP 1:** Place “Hitch-N-Ride” upside down on work surface. Place steering axle assembly onto last 2 rungs on one end of the basket (FIG.1), and secure with 4-1/4”x1/2” bolts, 4-1/4” fender washers, and 4-1/4” jam locknuts. *NOTE:* Place fender washers on bolt and slip into opening of rung on basket (FIG.2). Slide bolt and washer under axle assembly and insert through hole. Install locknut on bolt. **HAND TIGHTEN ONLY!** (FIG.3). Repeat process with other 3 bolts. Center Axle assembly in middle of basket and tighten all 4 bolts (FIG4). Washer will bow as bolts are tightened.



FIG. 1

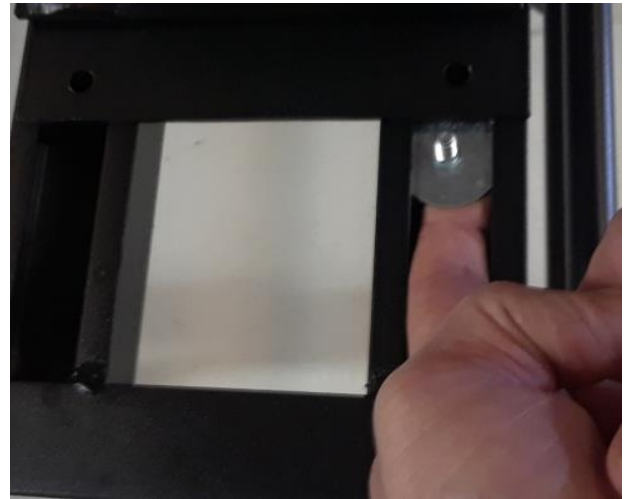


FIG. 2



FIG.3



FIG.4

**STEP 2:** Follow instructions for Step 1 to install rear axle assembly to basket (FIG.5).



FIG.5

**STEP 3: Slide axles through holes in axle assemblies (FIG.6). Next slide wheel spacers over axles (FIG.7). Slide wheels over axles until end of axle is visible (FIG.8). NOTE: Make sure valve stems on wheels are facing out. Secure wheels to axles using 5/8" flat washers and cotter pins (fig.9).**



FIG.6



FIG.7



FIG.8



FIG.9

**STEP 4: Turn cart assembly onto wheels. Attach handle holder to top round bar of basket on the end with front steering assembly. Secure with 1- padded clamp, 1- 1/4" x 1/2" bolt and 1- 1/4" jam locknut (FIG.10). Tighten bolt. NOTE: Handle holder will be moveable after installation. Secure lanyard attached to quick pin around same round bar. Quick pin will be used to secure handle into handle holder (FIG.11 and FIG.12 (next page)).**



FIG.10



FIG.11



FIG.12

**NOTE: If “Hitch -N-Ride” is to be used as cart/wagon only, the receiver bar and braces may be removed. If “Hitch-N-Ride” is to be used with the HNGC-350 lift assembly, remove receiver bar and braces. Keep braces for use with lift.**

**⚠ WARNING**

**DO NOT EXCEED WEIGHT CAPACITY OF HITCH-N-GO CART!**

**⚠ WARNING**

**NEVER HAUL PEOPLE OR PETS IN CART!**

**⚠ WARNING**

**ALWAYS MAKE SURE CARGO IS SECURED TO CART!**

**⚠ WARNING**

**MAKE SURE HANDLE IS SECURED IN UPRIGHT POSITION WHEN NOT IN USE!**

**For more information about this or other products, contact us at:**

**Great Day, Inc.**